

Fuel Adapter for GM 6.5L Detroit Diesel



1. Locate and remove the factory air bleed valve located on top of the fuel filter housing.
2. Thread the fuel pressure sensor into the fuel adapter and tighten using a 19mm and 22mm wrench.
3. Thread the fuel adapter assembly into the fuel filter housing and hand tighten. Use a 19mm wrench to tighten it a ¼ turn so that it does not leak.

⚠WARNING: Do not torque down the fuel bolt as it could strip the plastic threads of the fuel filter housing.

4. Route the sensor wire through the firewall and up to the gauge and secure using zip ties.

🔧 TECH TIP: Recommended fuel pressure is a minimum of 4 PSI.