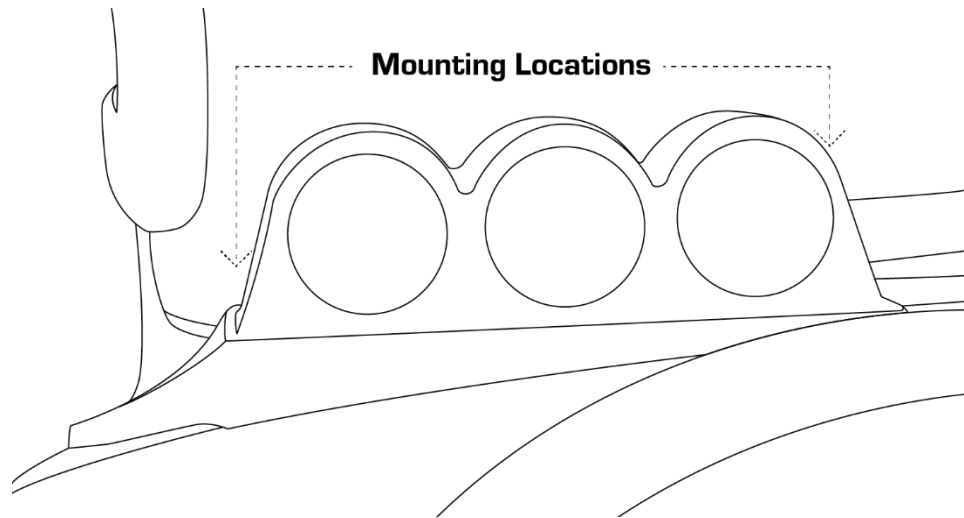


Dashboard Pod for 1999-2007 Ford Super Duty

1. Remove the lower kick panel of the dash using a flathead screwdriver.
2. Remove the driver side A-pillar trim.
 - Partially remove the weather stripping surrounding the factory A-Pillar.
 - Remove the factory A-pillar trim by removing the bolt covers using a flathead screwdriver; use an 8mm socket wrench to remove the bolts.
3. Route all the power, sensor wires and/or lines through the dash where the A-pillar trim was. Be sure to have the wires and/or lines secured with wire ties to keep away from any moving parts inside the dash.
4. Place the dash pod on the left side of the dash where the front of the pod is sitting, on the edge where the cluster surround meets the dash pad. The left edge of the pod should line up with the edge of the dash pad.
5. Connect the 2 1/16" [52mm] gauge wires to their sensors and power by following the instructions included with the gauges. Run the power, sensor wires and/or lines through the gauge pod holes.
 - **⚠ CAUTION:** Be sure to keep the wires and/or lines out of the way of the screws.
 - **➡ OPTIONAL STEP:** Our pillar pods can be painted using ABS plastic paint. Be sure to scuff the surface of the pod using a scuff pad. This will allow the paint to properly adhere to the surface of the pod. Before applying paint to the pillar pod, ensure it is cleaned off and there is no residue on the pod from scuffing it. Apply 2-3 even coats, waiting 10 minutes between coats to dry.
 - Be sure to follow the paint manufacturer's instructions while painting, as well as proper safety procedures.
 - Be advised, you will not be eligible to return this pod for a refund if painted.
6. Secure the dash pod with the included screws.
7. Reinstall the A-pillar using an 8mm socket wrench.
8. Reinstall the lower kick panel using a flathead screwdriver.

All MaxTow Products are subject to the MaxTow Limited Warranty. Please visit <https://www.maxtow.com/warranty-policies> to review complete Warranty, Terms, and Conditions.