


Technical Support 1.877.7MaxTow TechSupport@MaxTow.com Mon thru Fri 9am to 6pm EST



68RFE Transmission Spin On Filter Upgrade Screw

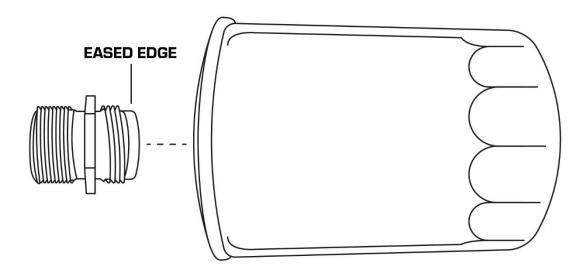

We recommend wearing safety glasses and gloves during this installation.

- 1. Using a 1/2" Allen wrench remove the plastic screw from a new spin on transmission filter.
- 2. Thread the eased edge of the Spin On Filter Upgrade Screw into the new filter and tighten using a 7/8" wrench.
- 3. Have a drain pan ready for any lost transmission fluid.
- 4. Using a filter wrench remove the installed spin on transmission filter from the transmission.
- 5. Spin the new spin on transmission filter with the upgraded screw into the transmission and tighten according to manufacture specifications.
- 6. Start the vehicle and check for leaks and transmission fluid level, top off if needed.
- 7. Be sure to swap the upgraded screw over to a new spin on filter anytime the spin on transmission filter is changed.

All MaxTow Products are subject to the MaxTow Limited Warranty. Please visit https://www.maxtow.com/warranty-policies to review complete Warranty, Terms, and Conditions.