

INSTALLATION INSTRUCTIONS

1.877.7MAXTOW • Support@MaxTow.com

TOW TO THE MAX.

6.0L POWERSTROKE OIL PRESSURE SENSOR ADAPTER



- 1. Disconnect the negative battery cable from each battery.
- 2. The air filter and intake pipe must be removed to gain access to the factory oil pressure switch for the dash light. Using a flathead screwdriver, loosen the band clamps on the intake pipe, unclip the retainers for the air filter, and lift out. Using an 8mm wrench, remove the two bolts connecting the intake pipe extension that is connected from the turbo to the retaining bracket.
- 3. In order to gain access to remove the factory switch, use a socket to remove the turbo oil feed line. Using an 8mm socket and extension, carefully remove the lower retaining bolt. Using a 10mm wrench, remove the two upper bolts on the oil feed line going to the turbo.
 - Please be sure to retain the oil feed line gasket on the turbo side of the feed line.
- **4.** With the oil feed line removed, unclip the single wire connector on top of the factory oil pressure switch and secure it out of the way with a wire tie (this will not be plugged back in). Remove the factory oil pressure switch using a 1 1/16" socket and extension, making sure the O-ring on the switch is also removed. The sensor will no longer be used.
 - With the harness unplugged most of the time, the check engine light should not come on. In the event one does t-fitting will be needed to run the factory sensor.
- 5. Using a 22mm and a 14mm wrench, tighten the new oil pressure sensor to the oil pressure adapter. Lube the O-ring on the adapter with oil and thread the oil pressure assembly into the open port and tighten.
 - Due to space restrictions, a remote line kit is required if the 2-post sensor is used. A remote line kit can be found on www.MaxTow.com.
- 6. Plug the sensor harness into the sensor and secure the wires away from heat and moving parts using zip ties.
- 7. Reinstall the oil feed line to the turbo, first by securing the lower section of the pipe into the oil cooler and ensuring that the gasket is seated properly on top of the turbo. Once in place, tighten the bolts using the 8mm wrench for the lower and the 10mm wrench for the upper two.
- 8. Reinstall the intake pipe extension to the turbo and secure it to the retaining bracket using the 8mm wrench. Reinstall the air filter and the intake pipe using a flathead screwdriver.
- 9. Finish installing the rest of your gauge as per the included instructions.
- 10. Reconnect the negative side of both batteries.
- 11. Start vehicle to check for leaks.

| RPM | Recommended |
|------|----------------|
| | Pressure (PSI) |
| 700 | 12 |
| 1200 | 24 |
| 1800 | 45 |
| | |



INSTALLATION INSTRUCTIONS

1.877.7MAXTOW • Support@MaxTow.com

TOW TO THE MAX.

7.3L POWERSTROKE OIL PRESSURE SENSOR ADAPTER



- 1. Disconnect the negative battery cable from each battery.
- 2. Using a 13mm socket, remove the two nuts connecting the engine cover to the top of the engine.
- 3. Unclip the single wire connector on top of the factory oil pressure switch located on the top right side of the HPOP oil reservoir and secure it out of the way with a wire tie (this will not be plugged back in). Remove the factory oil pressure switch using a 1 1/16" socket and extension, making sure the O-ring on the switch is also removed. The sensor will no longer be used.
 - With the harness unplugged most of the time, the check engine light should not come on. In the event one does t-fitting will be needed to run the factory sensor.
- **4.** Using a 22mm and 14mm wrench, tighten the new oil pressure sensor to the oil pressure adapter. Lube the Oring on the adapter with oil and thread the oil pressure assembly into the open port and tighten.
- 5. Plug the sensor harness into the sensor and secure the wires away from heat and moving parts using zip ties.
- 6. Using a 13mm socket, reinstall the engine cover.
- 7. Finish installing your gauge as per the included instructions.
- 8. Reconnect the negative side of both batteries.
- 9. Start the vehicle and check for leaks.

| RPM | Recommended Pressure (PSI) |
|------|-------------------------------|
| 700 | 12 |
| 1200 | 24 |
| 1800 | 45 |



INSTALLATION INSTRUCTIONS

1.877.7MAXTOW • Support@MaxTow.com

TOW TO THE MAX.

ONE YEAR NON-TRANSFERABLE LIMITED WARRANTY AND DISCLAIMER

MaxTow Performance, LLC. ("MaxTow") warrants to the original retail consumer purchaser, and not any other purchaser or subsequent owner, that this Product will be free from defects in material or workmanship for a period of **one (1) year** from the purchase date.

For a period of **one (1) year** from the date of purchase, at no charge to the Purchaser, MaxTow will repair or replace this Product if it is determined by MaxTow to be defective. After the warranty period, the Purchaser must pay all charges for parts and labor.

Coverage under this warranty is only valid within the United States, including its territories, as well as in certain other countries. Purchasers should check our website, **www.MaxTow.com**, to determine the warranty coverage in the countries in which they are located.

MaxTow does **not warrant the installation** of the Product, which is the sole responsibility of the Purchaser. Installation should be done by licensed professionals. Improper installation may cause damage to the Product and any vehicle in which it is installed, and may cause burns and electrical injury to individuals. MaxTow's warranty does not cover any expenses incurred in removing Products that are defective or re-installing replacement Products in their place.

During the warranty period, to have the Product repaired or replaced, the Purchaser must return the Product, freight prepaid by the Purchaser, to MaxTow (but for customers in the contiguous United States, MaxTow will pay the shipping charges if any Product fails during the first thirty (30) days after purchase). The Product must be returned in its original carton or in a similar package affording an equal degree of protection. MaxTow will return the repaired or replaced Product, freight prepaid, to the Purchaser. MaxTow does not provide Purchasers with temporary replacement units during the warranty period or at any other time.

This limited warranty is non-transferable and will automatically terminate if the original retail consumer purchaser resells the Product or transfers the vehicle in which the Product is installed. An "original retail consumer purchaser" is a person who originally purchases the Product, or a gift recipient of a new Product that is in its original packaging and unopened.

This limited warranty is subject to all of the following terms and conditions:

TERMS AND CONDITIONS

- 1. **NOTIFICATION OF CLAIMS; WARRANTY SERVICE:** If Purchaser believes that a Product is defective in material or workmanship, written notice with an explanation of the claim shall be given promptly by Purchaser to MaxTow. All warranty claims must be made within the warranty period, and any Products returned to MaxTow must be shipped in accordance with MaxTow's procedures (including use of RMA numbers supplied by MaxTow after notification). The repair or replacement of any Product or part thereof shall not extend the original warranty period. The specific warranty on the repaired part only (not including gauge sensors) shall be in effect for a period of ninety (90) days following the repair or replacement of that part, or the remaining period of the Product warranty, whichever is greater. MaxTow does not provide a warranty on replacement gauge sensors.
- 2. **EXCLUSIVE REMEDY; ACCEPTANCE:** Purchaser's exclusive remedy and MaxTow's sole obligation is to supply (or pay for) all labor necessary to repair any Product found to be defective within the warranty period and to supply new or rebuilt replacements for defective parts. MaxTow will refund the purchase price for such Product only if repair or replacement fails to remedy the defect. Purchaser's failure to make a claim as provided in paragraph 1 above or continued use of the Product shall constitute an unqualified acceptance of such Product and a waiver by Purchaser of all claims thereto.
- 3. **EXCEPTIONS TO LIMITED WARRANTY:** MaxTow shall have no obligation to Purchaser with respect to any Product that is subjected to any of the following: abuse, improper use, negligence, accident, modification, failure to follow the operating procedures outlined in the user's manual, failure to follow the maintenance procedures in the service manual for the Product, attempted repair by non-qualified personnel, operation of the Product outside of the published environmental and electrical parameters, or if the Product's original identification (trademark, serial number) markings have been defaced, altered, or removed. MaxTow excludes from warranty coverage Products sold AS IS and/or WITH ALL FAULTS. MaxTow also excludes from warranty coverage any consumable items such as fuses and batteries.

All software and accompanying documentation furnished with, or as part of the Product is furnished "AS IS" (i.e., without any warranty of any kind), except where expressly provided otherwise in any documentation or license agreement furnished with the Product.

4. **PROOF OF PURCHASE; REGISTRATION:** The Purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility. Registration of any Product or of this limited warranty is voluntary, and failure to register will not diminish any rights available under this warranty.

DISCLAIMER OF WARRANTY

EXCEPT FOR THE FOREGOING WARRANTIES, MAXTOW HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTY WITH REGARD TO ANY CLAIM OF INFRINGEMENT THAT MAY BE PROVIDED IN SECTION 2-312(3) OF THE UNIFORM COMMERCIAL CODE OR IN ANY OTHER STATE STATUTE.

LIMITATION OF LIABILITY

THE LIABILITY OF MAXTOW, IF ANY, AND PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR DAMAGES FOR ANY CLAIM OF ANY KIND WHATSOEVER, REGARDLESS OF THE LEGAL THEORY AND WHETHER ARISING IN TORT OR CONTRACT, SHALL NOT BE GREATER THAN THE ACTUAL PURCHASE PRICE OF THE PRODUCT FOR WHICH SUCH CLAIM IS MADE. IN NO EVENT SHALL MAXTOW BE LIABLE TO PURCHASER FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION, REIMBURSEMENT OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS OR FOR ANY OTHER REASON WHATSOEVER.

GOVERNING LAW: This non-transferable limited warranty shall be governed by the law of the State of New Jersey, U.S.A., and the United States of America, excluding their conflicts of laws principles. The courts of Camden County, New Jersey, shall have the exclusive jurisdiction over any legal action with respect to this warranty.

This limited warranty gives specific legal rights. You may also have other rights that may vary from state to state or from country to country. Some states or countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. You are advised to consult applicable state or country laws for a full determination of rights.