


## Pillar Gauge Pod for 2003-2009 Dodge Ram

\*Quad pod will only fit 2006-2009 vehicle\*

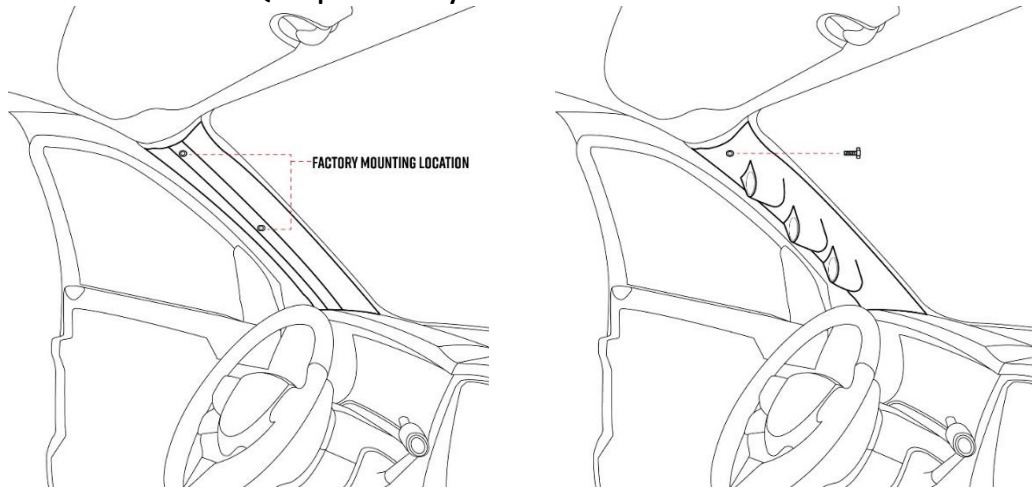

- 1. ⚠ WARNING:** Prior to installing this pillar pod, ensure your vehicle does not have side curtain airbags.
- This pillar pod is a complete replacement and will require removal of the factory A-pillar trim. Be sure to store the factory A-pillar trim in a safe location when done.
  - Partially remove the weather stripping surrounding the factory A-Pillar.
  - Remove the factory A-pillar trim by removing the bolt covers using a flathead screwdriver; use a 10mm socket wrench to remove the bolts.
- OPTIONAL STEP:** Our pillar pods can be painted using ABS plastic paint. Be sure to scuff the surface of the pod using a scuff pad. This will allow the paint to properly adhere to the surface of the pod. Before applying paint to the pillar pod, ensure it is cleaned off and there is no residue on the pod from scuffing it. Apply 2-3 even coats, waiting 10 minutes between coats to dry.
  - Be sure to follow the paint manufacturer's instructions while painting, as well as proper safety procedures.
  - Be advised, you will not be eligible to return this pod for a refund if painted.
- Connect the 2 1/16" [52mm] gauge wires to their sensors and power by following the instructions that are included with the gauges.
- Install the pillar pod to the factory A-pillar support using the included bolt. This bolt installs through the predrilled hole on the pod.
  - To ensure a proper fit, thread the included bolt using a 4mm Allen wrench into the vehicle A-Pillar support, but do not completely tighten. Reinstall the weather strip and adjust the pillar pod so that it lines up properly to the windshield. Once aligned, tighten the bolt.



All MaxTow Products are subject to the MaxTow Limited Warranty. Please visit <https://www.maxtow.com/warranty-policies> to review complete Warranty, Terms, and Conditions.